

HUAWEI B160

Fixed Wireless Terminal

USER GUIDE

Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



are trademarks or registered trademarks of Huawei Technologies

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers, thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations


Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Introduction

☐ Note:

The figures of the FWT (Fixed Wireless Terminal) are only for your reference, please refer color and shape to product.


Front view

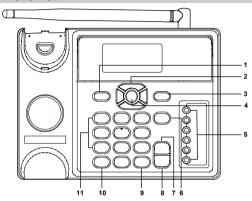


	-	
No.	Item	Description
1	Left function key	 Access the main Menu in standby mode. Select the option displayed on the lower left corner of the screen.
2	Scroll keys	Access the shortcut screen in standby mode.Adjust the volume during a call.
3	Right function key	 Access the Contacts screen in standby mode. Select the option displayed on the lower right corner of the screen.
4	OK key	 Access the main Menu in standby mode. Select the option displayed on the lower left corner of the display screen.
5	Shortcut keys	 Speed dial a phone number. Select Settings > Phone settings > Shortcuts to assign a shortcut key to a phone number.
6	End key	 End a call or reject an incoming call. Press and hold it to power on or off. Return to the standby mode.

No.	Item	Description	
7	Hands-free key	 Make or answer a call without lifting the handset. Cancel the dialing that is in hands-free mode. End the call that is in hands-free mode. 	
8	Call/Redial key	Make or answer a call. View dialed calls in standby mode.	
9	# key	 Press and hold it to switch between the silent and normal profiles. Switch on or off the input mode of T9 in editing mode. Mark or unmark a record. 	
10	* key	 Press and hold it to lock the keyboard in standby mode. Switch between different input methods in editing mode. 	
11	Number keys	Enter numbers and characters.	

Back View and Side View

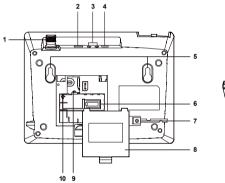



No.	Item	No.	Item
1	Antenna jack	2	Data port
3	Headset jack	4	Power jack
5	Wall-mounting brackets	6	Battery container
7	Coiled cord jack on main unit	8	Battery container cover
9	SIM card slot	10	Battery cord jack

Icons

Icon	Description	lcon	Description
Yutt	Network signal strength	c	Calling
Ø	Alarm clock is on	×	No service
\boxtimes	Message received	(h)	Hands-free mode
翠	Voice message received	٠	Powered by power adapter
6	Keypad lock		Battery power level
*	In silent profile	醖	3G network
٩	Line 2 is selected		

Menu Tree

Contacts	Messages	Call Log	
 Phone SIM Groups Speed Dial Number Copy all Delete all Settings Memory status 	 Write SMS Inbox Drafts Sent Settings Delete all Memory status 	 Missed Received Dialed Calls status Delete all 	
Tools	Profiles	Settings	
Alarms Calendar Calculator Word Time	 Normal Silent Activity My profile 1 My profile 2 	 Phone settings Display settings Call settings Network Security 	

Using the Menu

- 1 In the standby mode, press Left function key to display the main menu.
- 2. Press or to move around the menus, and then press Left function key to select items
- 3 If the menu contains further submenus, repeat Step 2.
- 4 Use the selected function according to the prompts on the screen.
- 5 Press Right function key to return to the previous menu.
- Press (6) to return to the standby mode.

Installation


Installing the SIM Card



(N Caution:


The SIM card and its golden contact can be easily damaged by a scratch or bend. Be careful when installing or removing the SIM card.

Power off the device and remove the power supply cable. Install the SIM card according to the following figure. Make sure that the golden contact on the SIM card is facing downwards.

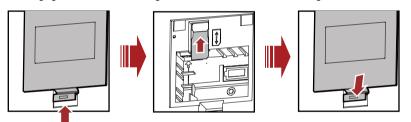


Installing the Battery

Power off the device and remove the power supply cable. Install the battery according to the following figure. Make sure that the battery cord plug matches the battery jack. Do not insert the battery reversely.

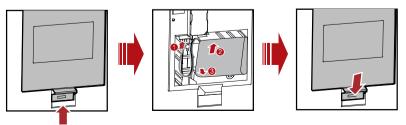

Installing the Power Adapter

- 1. Install the battery based on the battery installation steps.
- 2. Connect one end of the power adapter cable to the device and the other to the power socket.
- 3. The battery charging icon is displayed on the screen. The battery charging icon becomes static when the battery is fully charged.




□ Note:

- Remove the battery if the device is left unused for a long period.
- If the battery has not been used for a long time or the battery is exhausted, the screen of the FWT may not function when you charge the battery again. This is normal. After the battery is being charged for a while, you can power on the FWT for use.
- In normal conditions, the FWT depends on the power adapter for power supply and will
 use the battery only in the case that the electricity has failed and the power adapter is
 unavailable. As the battery can supply power only for a limited period, you must make
 sure that the battery has been fully charged before putting it into use.

Installing the Headset (Optional)

The device supports headset jack. For the choice of your headset, consult your service provider.

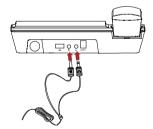

Call

Making a Call

- 1. Enter or edit a number in one of the following ways:
 - Enter a phone number through the keypad.

Select a number from Call Log.
Select a number from Contacts.

2. Press to dial.
3. Press to end the call.

Answering a Call

When there is an incoming call, press , Left function key or lift the handset to answer it. Press to reject it.

Message

Creating a Message

- Select Messages > Write SMS.
- 2. In the message editing screen, select **Options** to perform operations in the option list.
- 3. After editing the message, press key to add a recipient's number.
- 4. Press (ok) key to send the message.

Note:

The maximum number of English letters in a single text message is 160. If the characters you entered exceed this limit, the text is divided into two or more continuous messages when it is sent.

Viewing a Message

The inbox stores received messages.

- Select Menu > Messages > Inbox.
- Press to scroll the messages.
- 3. Press key to view the message.
- Press Left function key to reply, delete, or forward a short message, or call or save the phone number of a message.

Input Modes

Note:

- Press * key to switch between input methods.
- Press # key to enable or disable T9 method.
- Press 1 key to display the list of symbol.
- Press Right function key to delete the letter in front of the cursor.

T9 Input Method

Press each key carrying the desired letter once, and then the predictive text scheme will present the available words composed by the letters you have entered in the drop-down list.

Traditional Input Method

When **T9** input method is off, you can use the traditional input method. Repeatedly press the key that carries the letter to be entered when it appears on the screen.

"123" Numeric Input Method

In a text editing screen, press and hold the character/number keys to enter corresponding numeric characters.

You can also press successively the * key to switch to the "123" numeric input method, and enter corresponding numeric characters by pressing the character/number keys.

Symbol Input Method

Your device provides an independent symbol input method.

For example, to enter ":" with the symbol input method, you can just press the scroll keys to select ":"

from the symbol list and then press

Inputting Different Languages

In editing mode, select **Options** > **Input language** to set the language for the text.


Data Service

Connecting the Device to a PC

The device can be connected to a PC to provide data services. You need to purchase the data service suite. For details, consult your service provider.

Note:

- Power off the device and then disconnect it from the power adapter before connecting.
- · Use the data service suite provided by the manufacturer.



Installing the Management Program

This section introduces how to install the management program and the hardware driver. The procedures are for your reference only.

- 1. Connect the FWT to a PC with a compatible USB cable.
- 2. The system finds the new hardware and installs the modern driver automatically.
- 3. The installation program automatically starts, and then the installation interface is displayed.
- 4. Follow the instructions of the installation program.
- When the installation completes, a shortcut icon of the FWT management program is displayed on the desktop.

M Note:

The operating system configuration requirement of a PC: Windows 2000, Windows XP, Windows Vista (32-bit or 64-bit).

Applying the Data Service

You can apply and enjoy such data services as Web browse. For details, consult your service provider. The procedures are for your reference only.

- Double click the newly created FWT Partner icon.
- 2. Click **Settings**, and then select **New** to create a new profile.
- 3. Enter the relative setting information and save the profile, click **OK**.
- 4. Click **Connect** to dial up. After the login completes, you can access the Internet.

Note:

- The profile information varies with networks. For details, consult your service provider.
- The connection rate shown after the dial-up is the connection rate of the data port. For details, consult your service provider.

Security

You can change the settings related to the device security. Select **Settings > Security**, and then select the following security setting items.

Reset

This option is used to reset user configurations of the device settings to the factory settings.

Password Lock

This option is used to enable or disable Phone lock and PIN lock.

Change Password

- Select Security > Change password.
- Select one item.
- 3. Enter the old password (The initial phone password is **0000**).
- Enter a new password.
- 5. Enter the new password again to confirm.

Note:

- · To modify the PIN code, you must set PIN lock to On firstly.
- If you enter the wrong PIN or PIN2 for three times, the SIM card is locked. You need the PUK or PUK2 code to unlock the SIM card. If you enter the wrong PUK or PUK2 code for 10 times in total, the SIM card is locked permanently.
- The PUK or PUK2 code is delivered with the SIM card. If you do not receive the code or forget it, contact your service provider.

Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device
 when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of hearing aids. For any such problems, consult your service provider.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

- Do not use your device while driving, and observe the local laws and regulations.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft.
 Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields.
 Otherwise, it may result in a malfunction of the circuit.
- On a stormy day with thunder, do not use your device, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- Use accessories authorized by the manufacturer. Using unauthorized accessories will render the warranty null and void.
- Because the device needs to disperse heat during working, place the device and the power supply
 in a ventilated and shady place. Never cover the device, put objects on it, or place it near water, fire
 as well as inflammable and explosive materials.
- This device should be installed and operated with a minimum distance of 20 cm between the antenna and all persons.
- Keep the ambient temperature between -10°C and 45°C while the device is being charged. Keep
 the ambient temperature between -10°C to 55°C for using the device powered by a battery.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When
 the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water
 immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries
 according to the local regulations or reference instruction supplied with your device.

Notice: For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand.
 Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of
 collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or
 explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device.
 Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature.
 Otherwise, they may not function properly and may lead to a fire or an explosion.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these
 objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be quaranteed in all conditions. You should not rely solely on the device for essential communications.

Disposal and Recycling Information



This symbol (or without a solid bar) on the device, and/or on its packaging, and on its batteries where included, indicates that the device including its electrical accessories (e.g. headset, adapter, cable) and the batteries should not be disposed of as normal household garbage. These items should not be disposed as unsorted municipal waste and should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, please contact your local city office, the household waste disposal service, or the retail store where you purchased it/them.

Disposal of the device and batteries if included is subject to WEEE Directive Recast (Directive 2012/19/EU) and Battery Directive (Directive 2006/66/EC). The purpose for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

Reduction of Hazardous Substances

This device is compliant with the REACH Regulation [Regulation (EC) No 1907/2006] and RoHS Directive Recast (Directive 2011/65/EU). Batteries where included are compliant with Battery Directive (Directive 2006/66/EC). For more information about the REACH and RoHS compliance of the device, please visit the Web site www.huaweidevice.com/certification. You are recommended to visit the Web site regularly for up-to-date information.

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

C€0168

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Please visit <u>www.huaweidevice.com/worldwide/support/hotline</u> for recently updated hotline and email address in your country or region.